GREASING SPEEDPLAY PEDAL BEARINGS

THE GREASE GUN KIT AND REFILL GREASE CARTRIDGES ARE AVAILABLE THROUGH YOUR LOCAL SPEEDPLAY DEALER

 
IMPORTANT: GREASE PEDAL BEARINGS EVERY 2000 MILES, 3 MONTHS OR IMMEDIATELY AFTER RIDING IN WET, RAINY OR UNUSUALLY DUSTY CONDITIONS.

Warning: Use Waterproof Bearing Grease Only. Spray or liquid lubes such as oil, Tri-flow, WD-40 etc., may cause permanent damage. Parts damaged from lack of lubrication are not covered under Speedplay's warranty.

Greasing Zero, Light Action, X Series & Frog Series Pedals








USING THE BUILT IN GREASE PORT

Instructions for quick and easy pedal maintenance

- 1. Remove the Grease Port Screw with a #1 Phillips screw driver.
- 2. Insert grease gun tip into grease port hole.
- 3. Pump gun slowly while turning pedal body slowly until clean grease is visible at spindle end of pedal body.
- 4. Wipe off excess grease and reinstall Grease Port Screw. Note Overtightening screw may strip the dust cap threads.

 For Older Style X/1, X/2 Pedals



- 1. Remove old dust cap by prying under side tabs with sharp pick tool.
- Install Speedplay's current X/1, X/2 Dust Caps into Pedal Body (Dust Caps available through your local Speedplay Dealer).
- 3. Follow Steps 1 4 above.
- *Also Includes Hydraulic Coupler (Zerk) Fitting



Grease Gun Loading Instructions


Features

All metal construction with rugged painted finish.
Pistol grip for easy, one-hand operation.
Uses standard 3 oz. grease cartridge.

Compact "tool box" size - perfect for hard to reach jobs.

Easy loading

- 1. Remove head cap.
- 2. Pull plunger rod and lock.
- 3. Remove cap from end of cartridge and insert in barrel (foil end of grease tube at top).
- 4. Pierce and remove center foil with sharp object.
- 5. Replace head securely. Do not over tighten.
- 6. Unlock plunger and slowly push into barrel.
- Unscrew head cap about one turn to release air pocket.
- 8. Retighten head securely. Do not over tighten.

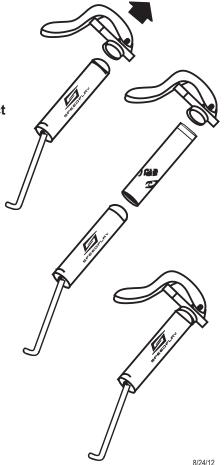

Rev. 2013.01.09